


C200/C200 B Staple Pattern Guide

Application	Slope		Channel
	≤ 3:1	≤ 1:1	≤ 108 Pa (2.25 lb/ft ²) Shear Stress ≤ 2.7 m/sec (9.0 ft/sec) Velocity
Staple Pattern	A	B	B

⊗ = Staple Placement

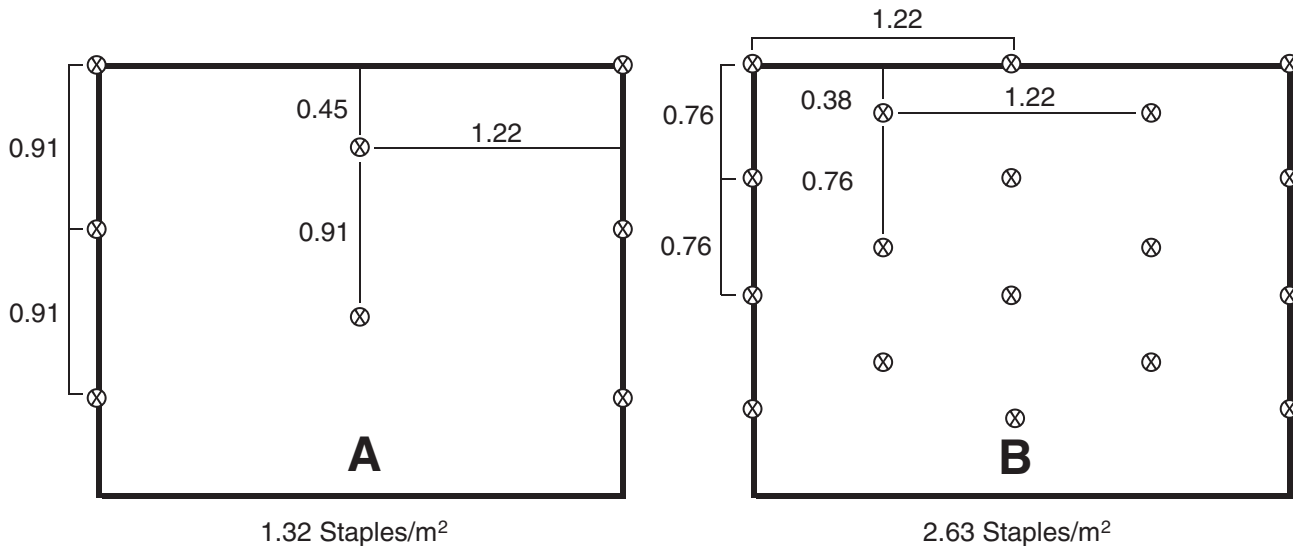

Notes:

1. Recommended staples are a minimum 6" biodegradable staple or 6" wire for cohesive soils and 6" biodegradable staple or 8" wire for non-cohesive soils.
2. For best results insert staples so heads are parallel to the flow of water.
3. Not to scale: Dimensions in metres unless otherwise noted.
4. Adjust staple pattern so staples are placed in critical channel points (e.g. slope interface, channel bottom) as illustrated below:

Critical channel points are circled.

